

شرح كيفية تشغيل CCCAM
بأجهزة


ECHOLINK PRIME

ECHOLINK MERAKI


نضغط على الزر MENU




ثم نذهب الى خانة Configuration Réseau

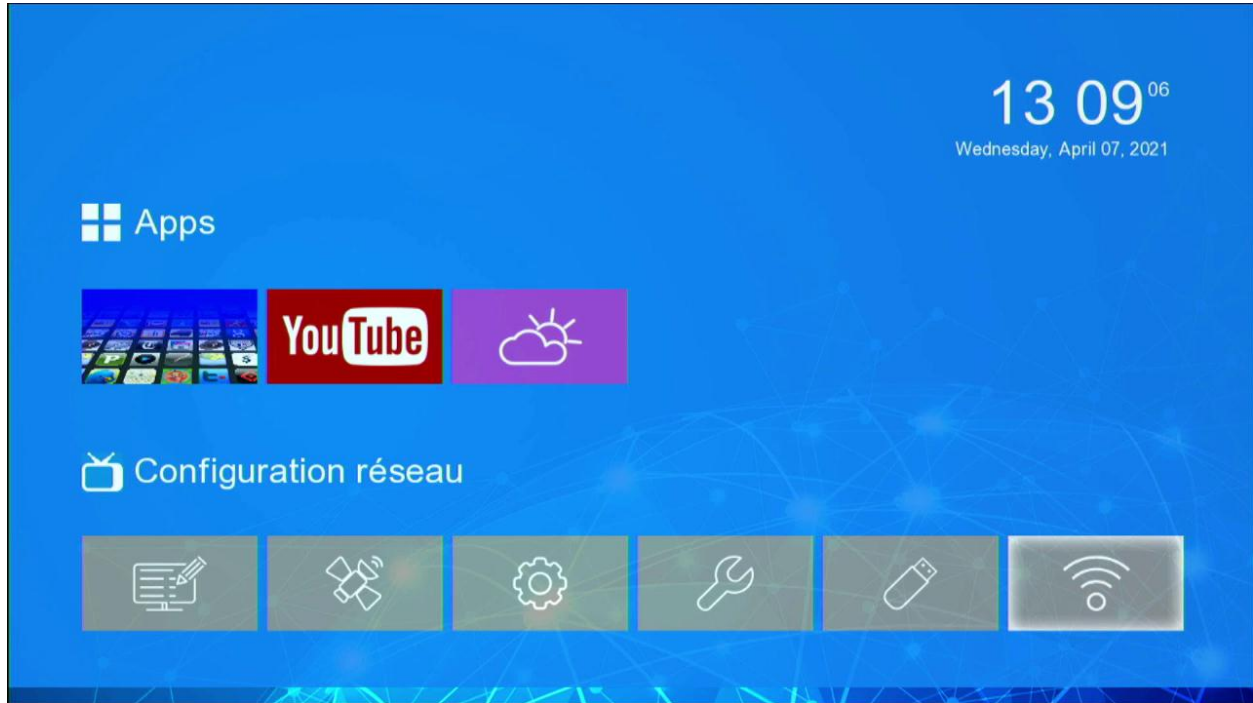


ثم نضغط على Paramètre serveur

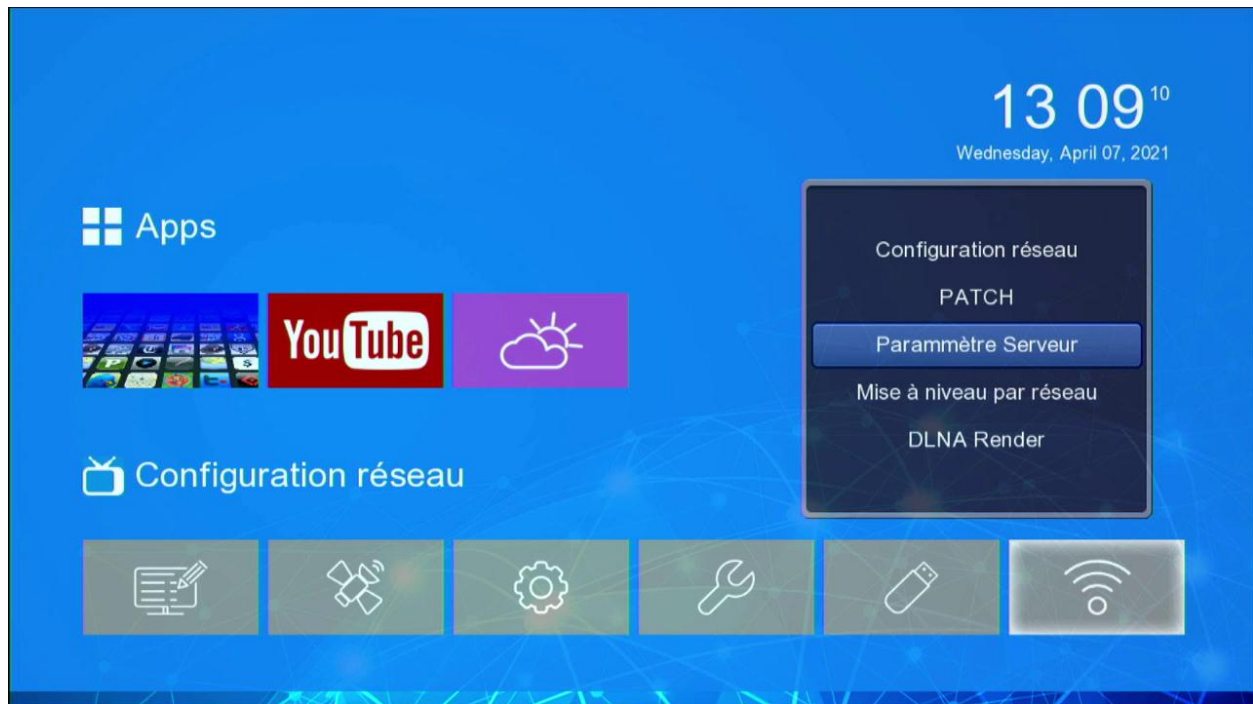


نختار CCCAM Setting

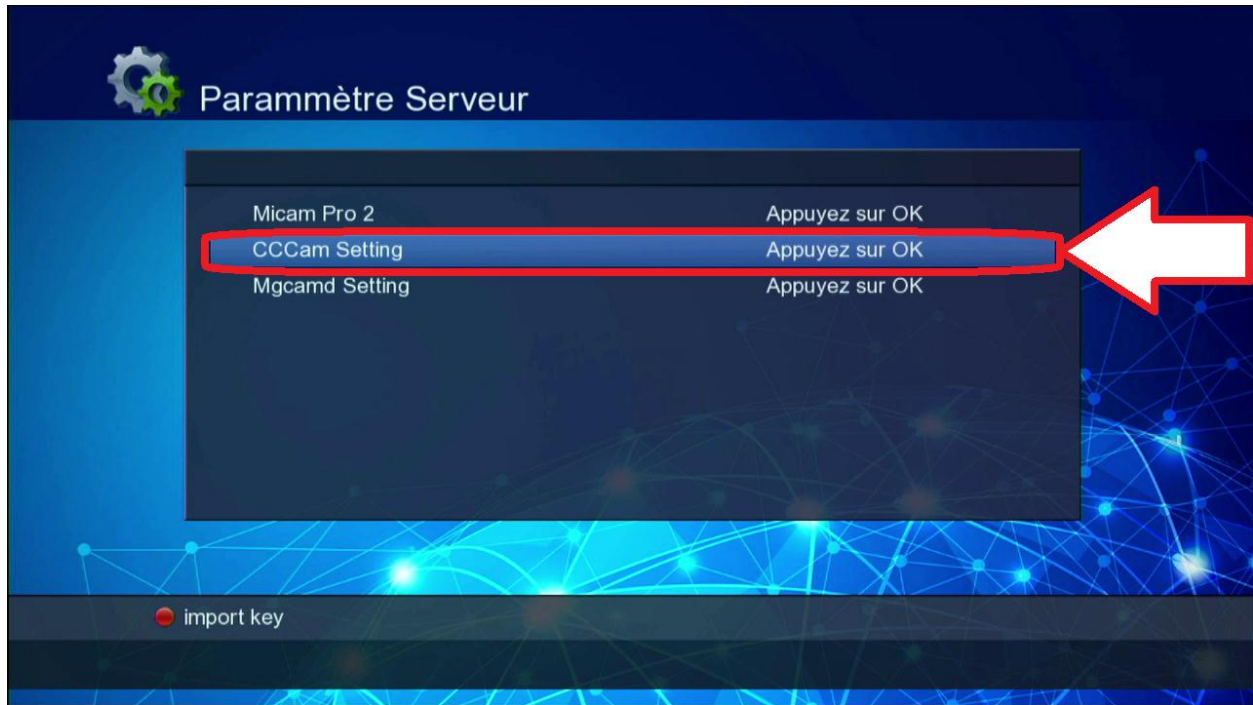

ثم نقوم بأدخال معلومات السسيكام

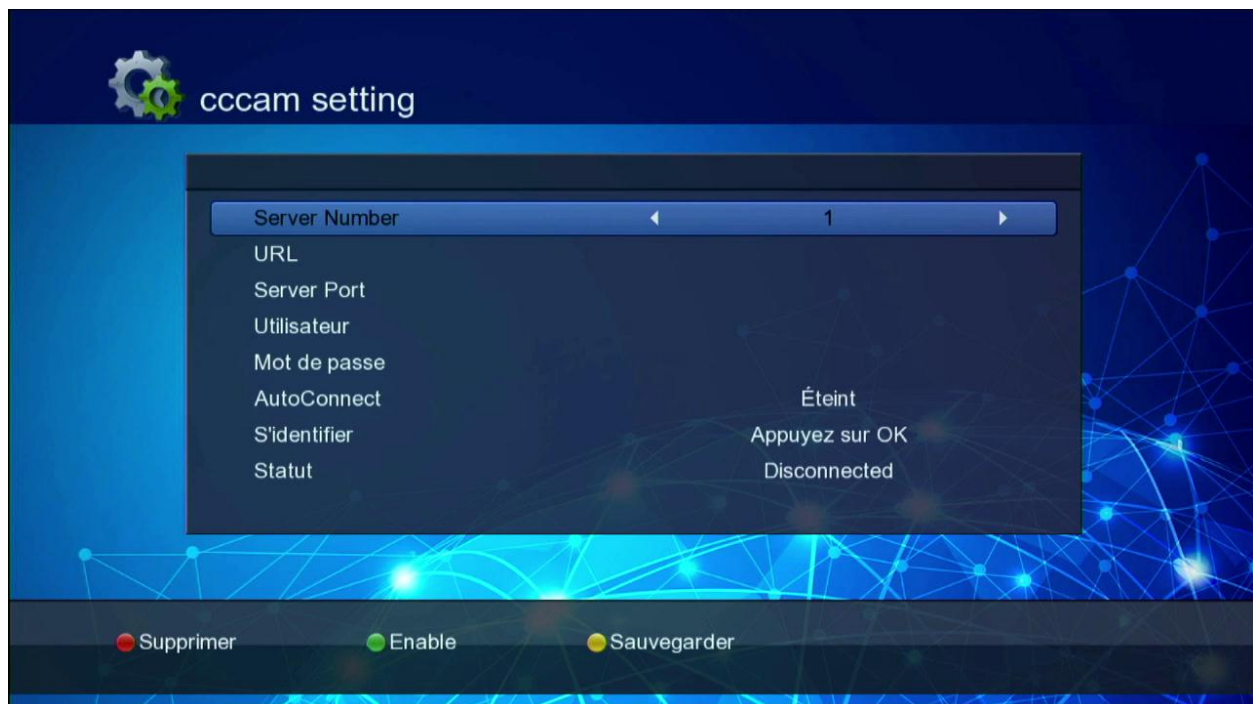



مبروك عليك تم تشغيل سسيكام بنجاح



 cccam setting

Server Number	1
URL	*****
Server Port	1400
Utilisateur	eco
Mot de passe	****
AutoConnect	Allumé
Logout	Appuyez sur OK
Statut	Connected

● Supprimer ● Disable ● Sauvegarder

 Comedia

 0075

M.COMEDIA HD  2021/04/07  13:14

Nagravision Astra 1 10729 / V / 22000
Aucune information 1920 x 1088 H-264

Aucune information 